



# Installation Instructions

For Movin Goose Decoys  
Questions Goto [www.movingoosedecoys.com](http://www.movingoosedecoys.com)  
1-800-352-8800

Please Read and Follow Instructions Carefully

Kit Contents;

- 1 Movin Goose Decoy head cup assembly
- 2 Head cup and head stickers
- 1 Bungi Ball
- 1 Charger
- 1 Battery
- 1 Instructions



What you will need to Install Kit.

Hot glue gun with glue

Drill

2 3/4" or 2 7/8" Hole saw

3/8" Drill Bit

Sand paper 120 grit.

1 Big Foot decoy, Preener or Sentry (Depending on kit)

### Safety Note:


Care must be taken with any power or hand tool's.

Please read and understand operation safety instructions for all power & hand tools. And if you do not feel safe using power or hand tools, Please get professional help & always wear safety glasses.

Step 1. Cut 3 holes with 2 3/4" or 2 7/8" hole saw

1. In Head cup area as shown.
2. In body leg cup area as shown.
3. In leg assembly as shown.

Sand holes after cutting to remove plastic burs.

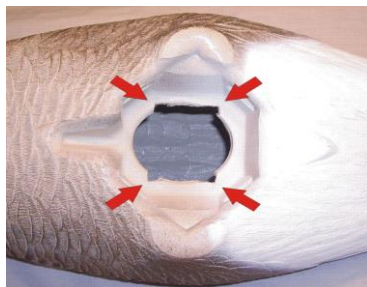

Note: The battery Shown is no longer available, After cutting the 2 7/8" holes in the decoy Body and Leg assembly, Notch the leg assembly and body as shown with Red Arrows to accept the new larger Battery.

Step 2. Drill 3/8" hole in body behind body in leg area as shown.

Step 3. Insert battery in leg with Bungi Ball. **Note**, The new battery is larger than the one shown, The leg and decoy body will need to be notched so the battery will fit as shown.



Step 4. Assembly, install electronics in head opening as shown. Use hot glue gun to glue head cup assembly to body.

Step 5. Install switch in 3/8" hole behind leg assembly attach the nut. Run power cable out of leg hole in decoy body



Step 6. Remove locking tabs from decoy head. Tabs must be completely removed & smooth, Sanding them off works best as shown.

Step 7. Hook up battery to decoy & start head cup with on/off switch.

Step 8. Make note how head cup moves & place head cup sticker's in head cup and on head so that head moves in a forward direction, (note stop head cup from running before installing stickers).

**Do Not Glue Decoy Head into Head Cup, push fit only.**

### **How to use your "Movin Goose Decoys,**

Set your "Movin Goose Decoys" in your spread where you think the geese will land. Attach head 1st and turn on your "Movin Goose Decoys".

Do Not rotate Head Cup Manually as this will damage the motor drive.

**Note:** If you have any questions or need help please feel free to Call anytime.

1-800-352-8800

**Best Products & Service Company** PO Box 22212 Denver, Colorado 80222 [movingoosedecoys.com](http://movingoosedecoys.com)